

 
 

 
 
 
 


Interface Cables

Code	Schematic		Interface		Application
			side "A"	side "B"	
K1	2x2-pin (F)	DB-9 (F)	COMECO device	RS232 (PC)	Configuration: TRB(I)-B, TRC-B, TROJ Software: "TraCon" v1.16 or higher
K2	1x3-pin (F)	DB-9 (F)	COMECO device	RS232 (PC)	Configuration: TRB(I)-C, TRC-C, TRZ Software: "TraCon" v1.16 or higher
K1U	2x2-pin (F)	RJ-25 (M)	COMECO device	IA250T	Configuration: TRB-B, TRBI-B Software: "TraCon" v2.0 or higher
K2U	1x3-pin (F)	RJ-25 (M)	COMECO device	IA250T	Configuration: TRB-C, TRBI-C, TRZ Software: "TraCon" v2.0 or higher
K3	USB-A (M)	DB-9 (F)	COMECO device	RS232 (PC)	Configuration: TRY, old TRB-C Software: "TraCon" <sup>(1)</sup>
K3U	USB-A (M)	USB-A (M)	COMECO device	USB (PC)	Configuration: TRY Software: "TraCon" v2.0 or higher
K4	2x2-pin (F)	DB-9 (F)	COMECO device	RS232 (PC)	Configuration: old TRB-B Software: "TraCon" <sup>(1)</sup>
K5	1x3-pin (F)	DB-9 (F)	COMECO device	RS232 (PC)	Configuration: old TRB-B Software: "TraCon" <sup>(1)</sup>
K6	DB-9 (M)	DB-9 (F)	IA100 interface adapter	RS232 (PC)	Standard RS232 cable
K7	DB-9 (F)	DB-9 (F)	RS232	RS232 (PC)	Standard RS232 cable
K8	USB-A (M)	USB-B (M)	USB 2.0 standard	USB 2.0 standard	Standard USB cable
K9U	M12 4-pin (F)	USB-A (M)	COMECO device	USB (PC)	Configuration and power supply: RHV, TSOJ Software: "TraCon" <sup>(1)</sup>
K10U	3-wire	RJ-25 (M)	COMECO device with RS485	IA250N	Configuration: COMECO devices Software: "PolyMonitor"
K11U	2x2-pin (F)	USB-A (M)	COMECO device	USB (PC)	Configuration: TRB(I)-B, TRC-B, TROJ Software: "TraCon" v2.0 or higher
K12U	1x3-pin (F)	USB-A (M)	COMECO device	USB (PC)	Configuration: TRB(I)-C, TRC-C, TRZ Software: "TraCon" v2.0 or higher
K13	RJ-14 (M)	DB-9 (M)	OT801 serial printer	IA300	Configuration: IA300 data-logger Software: "InfoPrint"
K14	USB-A (M)	USB-A (M)	USB 2.0 standard	USB 2.0 standard	Standard USB cable

<sup>(1)</sup>Contact COMECO

Code	Schematic	Interface		Application
		side "A"	side "B"	
<b>K15U</b>		COMECO device	USB (PC)	Configuration: old TRB-B Software: "TraCon" <sup>(1)</sup>
<b>K16U</b>		current loop	USB (PC)	Power supply: 15 VDC, max. 60 mA
<b>K19 *</b>		COMECO device	RS232 (PC)	Configuration: TSOJ Software: "TraCon" <sup>(1)</sup>
<b>K19U</b>		COMECO device	USB (PC)	Configuration and power supply: TSOJ Software: "TraCon" <sup>(1)</sup>
<b>KA1</b>		COMECO device	K2, K2U, K5, K12U	Adapter – simulates K1, K1U, K4, K11U Configuration: TRB(I)-B, TRC-B, TROJ Software: "TraCon" v2.0 or higher
<b>KIA</b>		INOR device	RS232 (PC)	Configuration: TRSN-C (IPAQ-L) Software: "Ipro"
<b>KIB</b>		INOR device	RS232 (PC)	Configuration: TRSN-B (IPAQ-H) Software: "Ipro"
<b>KIC</b>		INOR device	RS232 (PC)	Configuration: TRP (ProfIPAQ) Software: "ProfiSoft"
<b>KID</b>		INOR device	RS232 (PC)	Configuration: TRSP (IPAQ-H/L <sup>+</sup> ) Software: "Ipro"